



For use with Port C Lace exit



RP-310

## **RevoLock**<sup>•</sup> V2 BOA Dial and HC Lace Kit Contents:



If the device utilizes the "A lace port" to route the lace to the distal end of the socket, you will need a "Port A" reel. Please contact your distributor to receive this part, RP-310A



WARRANTY: www.clickmedical.co/terms/#warranty U.S. Customers: Contact Click Medical directly Help@ClickMedical.co Help Line: +1 970 670 7012

International Customers: Please contact your local distributor

 $\mathbb{N}$ 

## Advisory

Must be installed by a professional trained in RevoLock fabrication. Lace will wear. At minimum, inspect monthly and replace every 6 months. Loss of suspension can occur if lace fails. Do not use on patients with nerve issues. Keep lace away from open flame and sharp edges. Secure insert to liner before tensioning system. See advisories in other languages: **clickmedical.co/advisories** 



P MDSS-UK RP LIMITED, 6 Wilmslow Road Rusholme, M14 5TP Manchester United Kingdom

CH REP

MDSS CH GmbH, Laurenzenvorstadt 61 5000 Aarau, Switzerland

MD MDSS GmbH, Schiffgraben 41 30175 Hannover, Germany




Click Medical, LLC, 1205 Hilltop Parkway, W101 Steamboat Springs, CO 80487, USA +1-970-670-7012

For video education on Click Adjustability and RevoLock operation **Visit www.clickacademy.co** 


## Remove dial.

- a) Locate the metal insert.
- b) Insert a small flathead screwdriver between the metal insert and the dial body.
- c) Gently pry the reel upwards.

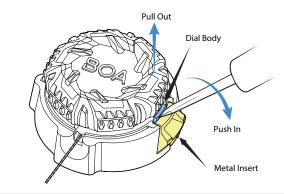


## Remove the lace.

a) Ensure dial is open by pulling it up.



b) Pull all remaining lace out of the dial.



- c) Locate the large lace exit opening in the dial base.
  Hook lace loop in dial with a dental pick and pull lace out of dial.
- d) Cut lace and pull it out of the dial. Then remove lace from the device.

Confirm that you are using the correct replacement reel by identifying the C on the bottom of the dial.

If the reel has an "A" on the bottom or uses the "A lace port" to route the lace to the distal end  $^\circ$  of the socket, you will need an "Port A" reel.







Click Medical products are patent protected. For full list see www.clickmedical.co/patents

Revised 2023

